

Installing Zebra LP2844 or Zebra GK420d with PostalMate on Windows 7

(DHL, FedEx, and USPS print labels directly from PostalMate; no Windows printer setup required) For Windows 7 only.

The Zebra LP-2844 label printer must be installed twice in Windows; once for *PostalMate*, and again for UPS *WorldShip*.

Installing the LP-2844 for use with *PostalMate* software on USB: (*PostalMate* must be installed on your PC)

PostalMate and *Worldship* must be closed.

Unpack printer and load it with 4"x6" labels (not the small roll that came with the printer). Turn printer ON and make sure labels feed correctly. Turn printer OFF. Connect USB cable to rear of printer and to an available USB port on your PC. Turn printer ON. The device will install itself and then attempt to load drivers on its own. A troubleshooter may open asking to download the latest driver; close this window.

Click on **Start>Devices and Printers**.

Right click on the device and click **Properties**.

Click on the Hardware tab and select the **Zebra** printer from the list.

Click on the **Properties** tab and a new window will open; click the **Change Settings** button.

Click on the **Driver** tab and then click **Update Driver**.

Select **Browse my computer for driver software**.

Select **Let me pick from a list of device drivers on my computer**.

From the **Hardware Type** window, scroll down and select **Printers**. Click **Next**.

From the list of Manufacturers, select **Generic (Generic / Text Only)**. Click **Next**.

Click **Yes** on the Driver Warning. Click **Close** to complete the Wizard. Close all other open windows.

Click on **Start>Devices and Printers**.

Right click on the **Generic / Text Only** icon and select **Printer Properties**.

Type in **LP 2844** (not lp 2844). Click on **Ports**. Write down the name of the USB port that is checked for this printer.

Click **OK**.

Close the Devices and Printers window.

Open *PostalMate*. Click on **Tools>PostalMate Settings>Label Settings**.

For each 4" x 6" label you want to print, click once on "Not assigned" in the corresponding Printer name column and use the drop down arrow to select **LP 2844**. Scroll down and click "**Test printer assignment for selected label**". A sample label will print. Once you have assigned all your 4" x 6" labels click on **Save** and then **Close** (or Next).

Installing the LP-2844 for use with *PostalMate* software on Parallel: (*PostalMate* must be installed on your PC)

PostalMate and *Worldship* must be closed.

Unpack printer and load it with 4"x6" labels (not the small roll that came with the printer). Turn printer ON and make sure labels feed correctly. Turn printer OFF. Connect parallel cable to rear of printer and to an available parallel port on your PC. Turn printer ON.

Click on **Start>Devices and Printers**.

Click on **Add a Printer**.

Select **Add a Local Printer**.

Select **LPT1** for the port and click **Next**.

From the list of Manufacturers, select **Generic (Generic / Text Only)**. Click **Next**.

Select **Use the driver that is currently installed (recommended)**. Click **Next**.

Type in **LP 2844** (not lp 2844) for the printer name. Click **Next**.

Select **Do not share this printer** and click **Next**.

Uncheck the box to set the printer as the default. Click **Finish**.

Open *PostalMate*. Click on **Tools>PostalMate Settings>Label Settings**.

For each 4" x 6" label you want to print, click once on "Not assigned" in the corresponding Printer name column and use the drop down arrow to select **LP 2844**. Scroll down and click "**Test printer assignment for selected label**". A sample label will print. Once you have assigned all your 4" x 6" labels click on **Save** and then **Close** (or Next).