

Installing Zebra LP2844 or Zebra GK420d with Dazzle on Windows 7

Installing the LP-2844 for use with *Endica Dazzle* software: (Dazzle must be installed on your PC)

Open *Devices & Printers*.

Right click on *LP 2844* and select **Printer Properties**.

Click on the **Ports** tab and note which port the printer is installed on.

Click **OK**.

Select the **Zebra driver** from the *Drivers & Tech Notes* page at www.olsonives.com.

Click **Open** and then click **Allow** on the pop-up.

Double-click on the **New Zebra Driver** folder and then double-click on the application.

Click **Open** on the pop-up. Click **OK**.

Click **Unzip**. Click **OK**. Click **Yes** on *User Account Control* pop-up.

Make sure **English** is selected as the language and click **OK**.

A new program will open in your taskbar.

Click **Next**.

Select **Zebra EPL** from the manufacturer list and select **Zebra LP 2844** from the printer list. Click **Next**.

Select port you noted earlier. Click **Next**.

Click **Next** to keep Zebra LP2844 as printer name..

The *Configuration Assistant* will open. Click **Next**.

Select **4"x6"** for the label size (*at the bottom of the drop-down list*) and leave orientation as **Portrait**.

Change *Unit of Measurement* to **Inches** and click **Next**.

On *Dispense Mode* page leave as *none*. Click **Next**.

For *Media Type* leave as *Direct*. Click **Next**.

For *Media Tracking* leave as *Use Label Gaps*. Click **Next**.

Click **Finish**.

Click **Finish** and close the window.

Setting the LP-2844 for use with *Endica Dazzle* software: (Dazzle must be installed on your PC)

Open *Dazzle*.

Select **File>Printer Setup**.

From the drop-down list select **Zebra LP2844** for the printer.

Select **4"x6"** (*at the bottom of the drop-down list*) for the *Printer Paper Size*.

Select the following for *Label Orientation*: **Landscape, Face up, Left End First, Right Side**.

Click **OK**.