

Installing Zebra LP-2844 to work with *PostalMate* and *UPS WorldShip* software (DHL, FedEx, and USPS print labels directly from *PostalMate*; no Windows printer setup required) For Windows XP only.

The Zebra LP-2844 label printer must be installed twice in Windows; once for *PostalMate*, and again for *UPS WorldShip*.
Connect the printer to your PC via a USB port **only** when instructed below. *PostalMate* and *Worldship* must be closed.

Installing the LP-2844 for use with *PostalMate* software: (*PostalMate* must be installed on your PC)

Unpack printer and load it with 4"x6" labels (not the small roll that came with the printer). Turn printer ON and make sure labels feed correctly. Turn printer OFF. Connect USB cable to rear of printer and to an available USB port on your PC. Turn printer ON. Windows displays **Found new hardware** message. Wait until **Install New Hardware Wizard** appears. Click the **Install from a list or specific location (Advanced)** button. Click **Next**.

Click the **Don't Search. I will choose the driver to install** button. Click **Next**.

From the **Hardware Type** window, scroll down and select **Printers**. Click **Next**.

From the list of Manufacturers, select **Generic (Generic / Text Only)**. Click **Next**.

Click **Yes** on the Update Driver Warning.

Click **Finish** to complete the Wizard.

Click on **Start>Control Panel>Printers and Other Hardware>Printers and Faxes**.

Right click on the **Generic / Text Only** icon and click on **Rename**.

Type in **LP 2844** (not lp 2844) and hit Enter.

Right click on **LP 2844** and click on **Properties**.

Click on **Ports**. Write down the name of the USB port that is checked for this printer. You'll need this info later.

Close the Printer and Faxes window.

Open *PostalMate*. Click on **Tools>PostalMate Settings>Label Settings**.

For each 4" x 6" label you want to print, click once on "Not assigned" in the corresponding Printer name column and use the drop down arrow to select **LP 2844**. Scroll down and click "**Test printer assignment for selected label**". A sample label will print. Once you have assigned all your 4" x 6" labels click on **Save** and then **Close** (or Next).

Installing the LP-2844 for use with *UPS WorldShip* software: (*UPS WorldShip* must be installed on your PC)

Assuming that the printer has already been installed for *PostalMate*, per above, close all programs.

Determine the port the printer was installed on for LP 2844 with the Generic driver.

Click on **Start>Devices and Printers**.

Right click on **LP2844** and select **Printer Properties**.

Click on the **Ports** tab and note the port the printer is install on. Close the *Devices and Printers* window.

Open *UPS Worldship*.

Click on **Tools>System Preferences Editor**.

Click on the **Printing Setup** tab then click on **Label Printer Setup**.

Click on **Change Label Printer**. Click on **Add Printer** button.

For Printer Type select *Elton/Zebra* and click **Select**. Click **Install Zebra Printer**.

From the list of Manufactures, *Zebra* should be selected. On the Printers side, select **UPS Thermal 2844**. Click **Next**.

Select the port you noted earlier.

Ensure *English* is set as the language and click **Finish**. The printer will install.

The *Printer Selection* window will come back up; select **Cancel**.

Click on the **Change Label Printer** button. Select *UPS Thermal 2844* from the list and click **Select**.

Ensure *UPS Thermal 2844* is listed as the printer and click **Apply**.

Click on the **Print Test Label** button. A label will print and then click **OK**.

You will now be at the main *Worldship* screen.