

## Installing and Printing Store Logo with Samsung Receipt Printer

These instructions are to install a store logo on the Samsung SRP-350 receipt printers.

1.

Save your store logo to a file on the computer.

- A. Click on **Start>All Programs>Accessories>Paint**.
- B. Click on **File>Open** and select and open your logo file.
- C. Click on **File>Save As** and in the **File name** field give the file a new name.
- D. Underneath in the **Save as type** field select **Monochrome bitmap**. Click **Save** and then close Paint.
2. Determine which port your receipt printer is installed on.
  - A. Click on **Start>Printers and Faxes**. You may need to click on **Start>Control Panel>Printers and Faxes**.
  - B. Right click on the **Receipt Printer** icon and select **Properties**.
  - C. Click on the **Port** tab and make a note which port is selected. *Example: USB002, LPT1.....*
3. Download the Samsung logo utility from [OLSON & IVES](#) and save it to the desktop.
  - A. Double-click on the utility from the desktop and then select **Extract All**.
  - B. When the wizard opens, select **Next**.
  - C. Select the destination, then click **Next**.
  - D. Select **Finish** and a new window will open.
  - E. Double Click on *NV Image Tool* and hit **Run**.
4. Open the desired image.
  - A. From the program select the **Open File** button.
  - B. Click on the desired file and click the open button.
    - i. Your logo file name will now appear in the upper left side of the utility.
5. Select the correct printer interface.
  - A. Click on the **Port Setting** button.
  - B. Select *SRP-350* for the printer model and select the correct printer interface.
  - C. Click **OK**.
    - i. The printer must be connected and on at this time.
6. Install the logo image in the printer's onboard memory.
  - A. Ensure the file is highlighted in the upper left hand side of the utility.
    - i. The logo should appear in the main window.
  - B. Click on the **Download** button.
  - C. Click on the **Download Start** button.
    - i. The printer will take a few seconds and then should beep.
  - D. Click **OK** when download completes and then click **Cancel**.
7. Set-up CashMate to print the logo on your receipts:
  - A. Open **CashMate**.
  - B. Click **Tools>Options>Register Settings** and select the **Receipt** tab.
  - C. Check the **Enabled** box for the logo and select the desired size.
  - D. Click on the **Test** button above to print a sample receipt. If the logo is too big or too small, resize.

Call **OLSON & IVES** for further assistance, 800-205-0650