


Setup Star TSP200 Receipt Printer For *PostalMate/CashMate* Software




parallel port on printer



parallel port on PC

CashMate does not support serial port receipt printers. Your Star TSP200 printer should have a parallel port located on the bottom. Your computer must also have an available parallel port and you will need a parallel cable. If you do not have an available parallel port on the PC call us at 800-205-0650 to discuss your options.

1. Close *PostalMate/CashMate*. Turn the printer OFF. Disconnect the serial or parallel cable.
2. Locate the DIP switches. Check the position the switches are currently set.
 - a. The first set of 8 DIP switches should be in the ON position (pushed up).
 - b. The second set of 4 should have the first two ON (pushed up) and the last two Off (pushed down)
3. To change the settings for *CashMate*, turn the two last switches in the first set to OFF (pushed down). These are switches 7 & 8.
4. With printer OFF, connect a parallel cable to back of printer and to PC (cable ends are different; you can't make a mistake). Turn printer ON. Click on Start>Printers and Faxes. You may need to click on Start>Control Panel>Printers and Faxes. Click on "Add a printer" on the left side.
5. On "Welcome to Add Printer Wizard" click Next. Click on "Local printer attached to this computer". Make sure "Automatically detect and install my Plug and Play printer" is NOT selected. Click Next.
6. On Select a Printer Port screen, click on "Use the following port" and click on LPT1 (or the alternate LPT port your receipt printer is connected to). Click Next.
7. Manufacturer box appears on left and a Printers box appears on right. (If these do not appear uncheck the box "Show compatible hardware.") In Manufacturer's box click on "Generic", and in Printers box click on "Generic/Text Only." Click Next. If "Keep existing driver (recommended)" appears click Next.
8. Keep the "Generic/Text Only" printer name and click on No when asked "Do you want to use this printer as the default printer?" Click Next. Click on NO to print a test page. Click Next.
9. Click "Finish" on the Completing the Add a Printer Wizard screen.
10. The Printers and Faxes window will appear. We need to rename the printer. Right-click on the "Generic/Text Only" printer and click on "Rename."
11. Backspace over the "Generic/Text Only" and type in Receipt Printer (not "RECEIPT PRINTER" or "receipt printer"). Press Enter. Close the Printers and Faxes window by clicking on the red "X" in the upper right.
12. Open *PostalMate* and then open *CashMate* by clicking on the cash register icon in the upper right..
13. In *CashMate* click on Tools>Options>Register Settings. Click on the Receipt tab. In the "Assigned Printer" field click on "Receipt Printer" and click OK. The main *CashMate* screen will appear.
14. You can test the printer by ringing up a sale (you can void it later if you need to).

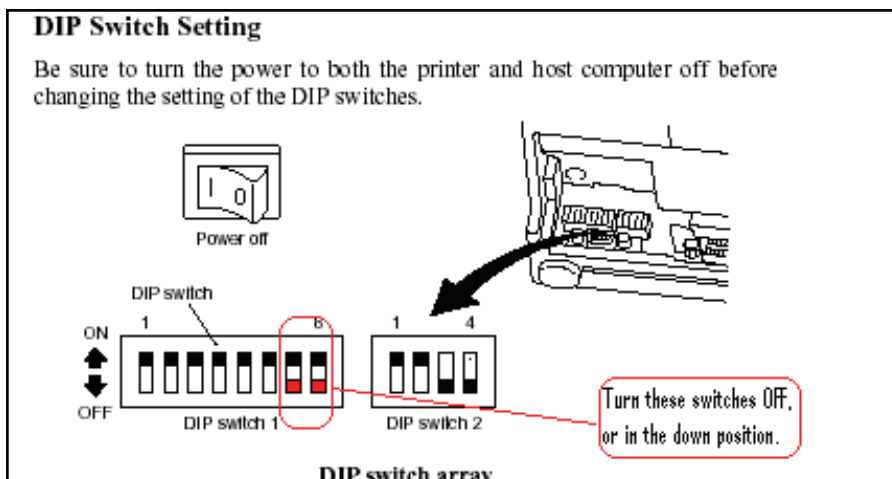

Setting up Cash Drawer for PM

If your cash drawer does not open automatically when the receipt printer prints, you may need a new cable or other part.

APG brand cash drawers:

You will need a new cable from the drawer to the receipt printer. These are available from OLSON & IVES for \$25 with free shipping.

Other brands of cash drawers:

Call OLSON & IVES, 800-205-0650, to consult with a technician. Also, visit www.olsonives.com to see the latest in cash drawers.